



GREEN TOILET



**HANKO URINE SEPARATING CERAMIC
TOILET PEDESTAL FOR DRY TOILET**



GREEN TOILET

HANKO URINE SEPARATING CERAMIC TOILET PEDESTAL FOR DRY TOILET

INSTALLATION AND USER MANUAL

The Hanko ceramic pedestal is a urine-diverting pedestal for dry toilets.

The package includes the ceramic pedestal and the following parts:



Urine drain strainer



Urine drain gasket



Pedestal floor fasteners



Hose clamp



Seat lid fasteners



Urine hose 2 m




PREPARING FOR INSTALLATION


At the installation site, create the following floor openings:

- For the solid waste chute (pipe diameter 200 mm)
- For the urine hose (hose diameter 25 mm)

Below is a schematic diagram with minimum distance recommendations.

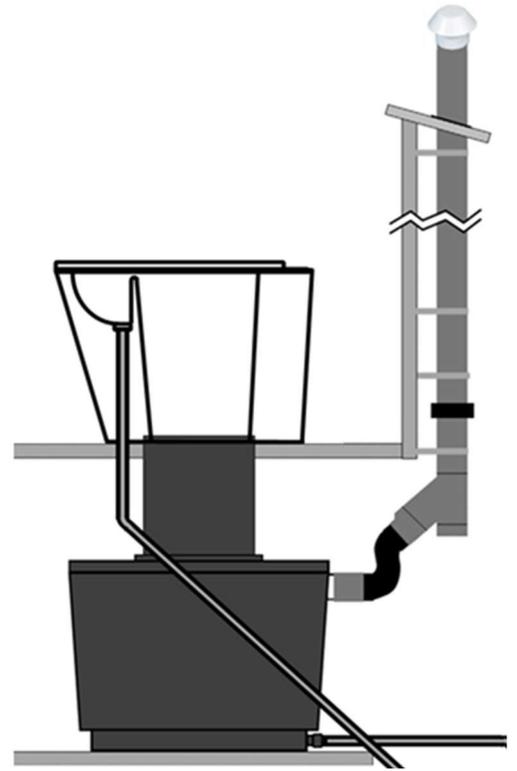

BACK WALL

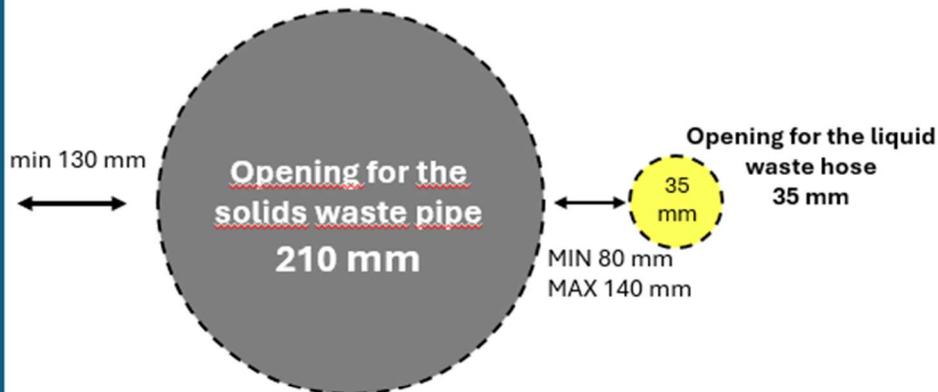

Minimum 130 mm distance from the back wall.

If possible, you can leave more space behind the pedestal, eg. 200 mm, to make replacing the seat lid easier without removing the ceramic pedestal.

INSTALLATION OF THE URINE DRAIN AND HOSE

Note! Do not attach the pedestal to the floor before you have installed the parts of the urine bowl and the hose in place.

Take the metal grate and the longer screw from the package. Remove the black gasket from the metal grate; it is not needed for this installation. The black gasket is used in another step if a HepVo water trap (optional accessory) is installed on the liquid waste hose.



Place the metal grate from above into the urine drain hole in the pedestal and the plastic part from underneath. On the underside, against the ceramic, the wide gray gasket should be placed (found in the same package as the longer screw). It may be helpful to perform this step with another person to make it easier to align the parts correctly.

Once the connection is in place, you can attach the transparent urine drain hose to the plastic part using a hose clamp for a tight seal.






GREEN TOILET

SOLID WASTE CHUTE INSTALLATION

The solid waste chute must rise 50 mm above the floor surface to create a tight connection with the ceramic pedestal. If desired, the connection can be sealed with sealing tape (not included in the package).

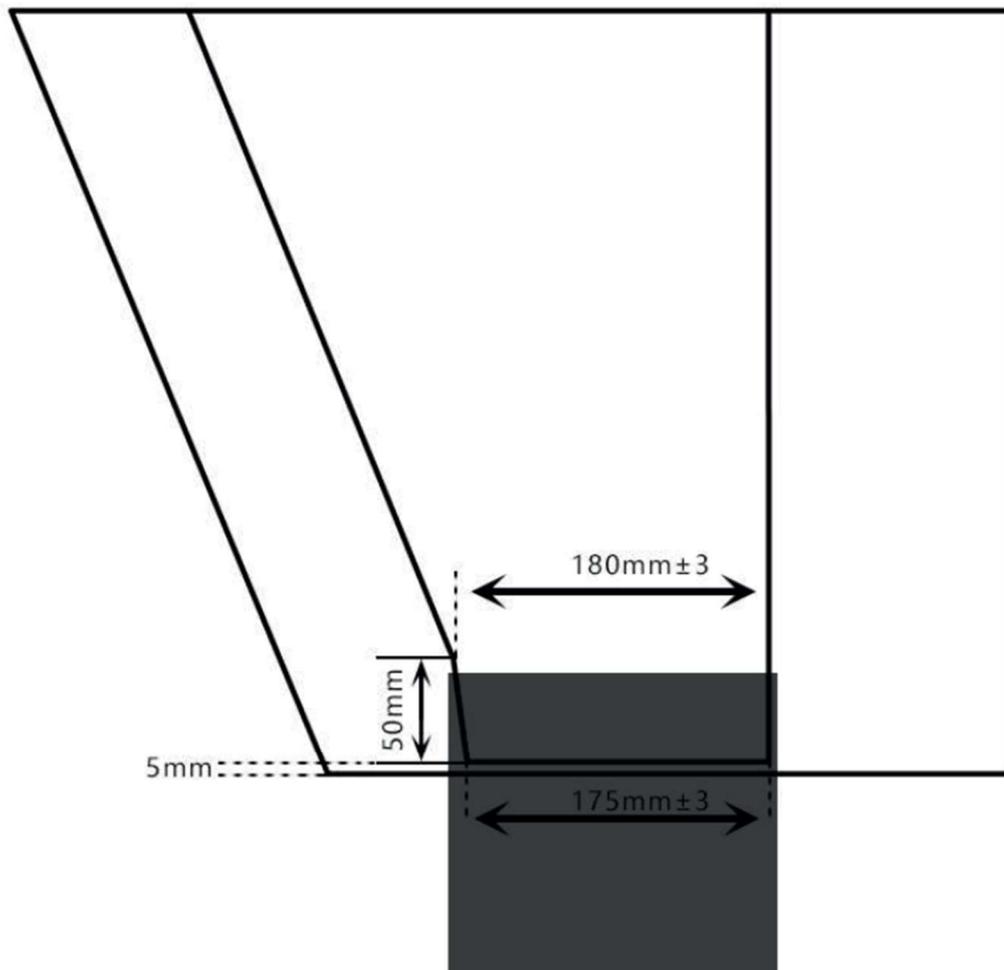

MOUNTING THE CERAMIC PEDESTAL

The package includes brackets for attaching the ceramic pedestal to the floor. The pedestal often stays securely in place with the solid waste chute alone, but floor mounting and silicone sealing around the edges can also be done if desired.



HANDLING TOILET WASTE

The following are required for collecting and handling waste with the Hanko pedestal:

- A composter or collection tank for solid waste
- A liquid waste tank or container for urine

Generally, all solid toilet waste can be composted into soil, and urine can be used as fertilizer in the garden during the growing season.

Check your local regulations regarding dry toilet use and waste handling.

USING THE HANKO-PEDESTAL

When using the Hanko pedestal, everyone sits down, including men. Urine is naturally diverted into a separate collection container, while solid waste and paper fall into the larger rear chute for separate collection.

Using dry material (e.g., sawdust, peat, or hemp fiber) is not mandatory with a separating pedestal but can be helpful to improve the compost quality in the solid waste container.

If urine is used as fertilizer in the garden, it should be diluted generously with water, for example, at a ratio of 1:8.

CLEANING AND MAINTENANCE

The Hanko pedestal should be cleaned regularly with water and biodegradable detergent. Cleaning is done with a regular toilet brush. If running water is unavailable, a watering can can be used as a substitute.

It is common for buildup to form in the urine drain pipe over time. This can be prevented by pouring or spraying a small amount of water into the urine bowl after each use. Biodegradable freshener capsules for the urine bowl are also available to reduce buildup formation.

ACCESSORIES

The following accessories are compatible with the Hanko pedestal:



Hepvo-water trap

A silicone water trap that can be installed directly onto the liquid waste hose. Prevents airflow from the urine tank to the pedestal and helps maintain a completely odorless toilet.

Green Toilet Lux

The Hanko pedestal is part of the complete dry toilet package, Green Toilet Lux. The package includes compost containers, a liquid waste canister, and a ventilation pipe kit for complete installation.



WARRANTY AND MANUFACTURER INFORMATION

The Hanko pedestal comes with a 10-year warranty against manufacturing defects. The seat lid and other parts have a 2-year warranty.

Meripalo Oy

Ihalantie 9 – 21200 RAISIO – FINLAND

www.pikkuvihrea.fi - sales@pikkuvihrea.fi